

WOLF STAINLESS STEEL BACKSPLASH INSTALLATION INSTRUCTIONS

Wolf Stainless Steel Backsplash Kit
Contents:

QTY	DESCRIPTION
1	Backsplash (see list)
4	#10x2"(51) Hex Head Screws

FOR MODEL NUMBERS:

30BAK (810425) 30"(762) W x
38"(965) H BACKSPLASH 30"(762)
WALL HOOD

36BAK (810426) 36"(914) W x
38"(965) H BACKSPLASH 36"(914)
WALL HOOD

42BAK (810427) 42"(1067) W x
38"(965) H BACKSPLASH 42"(1067)
WALL HOOD

48BAK (810428) 48"(1219) W x
38"(965) H BACKSPLASH 48"(1219)
WALL HOOD

54BAK (810429) 54"(1371) W x
38"(965) H BACKSPLASH 54"(1371)
WALL HOOD

60BAK (810430) 60"(1524) W x
38"(965) H BACKSPLASH 60"(1524)
WALL HOOD

66BAK (810431) 66"(1676) W x
38"(965) H BACKSPLASH 66"(1676)
WALL HOOD

NOTE: The total height of the backsplash is 38"(965). The Wolf backsplash is designed to be installed under your Wolf Hood and extend behind your Wolf Cooking appliance.

IMPORTANT NOTE: There are no mounting holes along the top edge of the backsplash for cosmetic reasons. Additional support is required and a contact adhesive must be used. Consult your local building material supplier or hardware store for details on backsplash adhesive products.

⚠ CAUTION

Backsplash corners and edges are sharp and caution should be used when handling backsplash.

INSTALLING BACKSPLASH:

1. Align top edge of backsplash with underside of hood. Allow maximum of 1/8"(3) clearance between the bottom edge of the hood and the top of the backsplash.
2. Carefully following the contact adhesive instructions, apply contact adhesive to the back side of the top edge of the backsplash. Then make sure the top edge of the back splash is level and mount the backsplash to the wall.
3. Make sure backsplash is level with the Wolf Hood before installing screws along bottom edge of backsplash (See Figure 1).

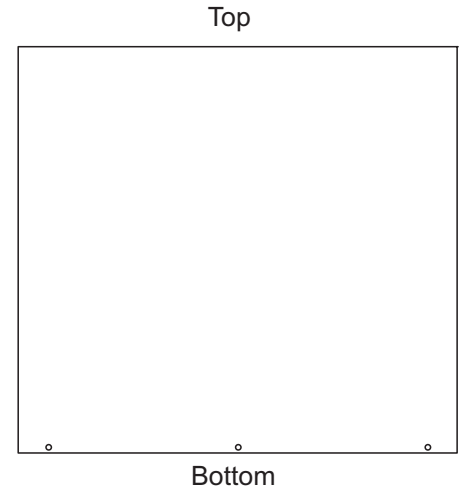


Figure 1

IMPORTANT NOTE: It may be necessary to pull Wolf Cooking appliance away from the wall to complete installation of backsplash bottom screws. As shown in figure 1.